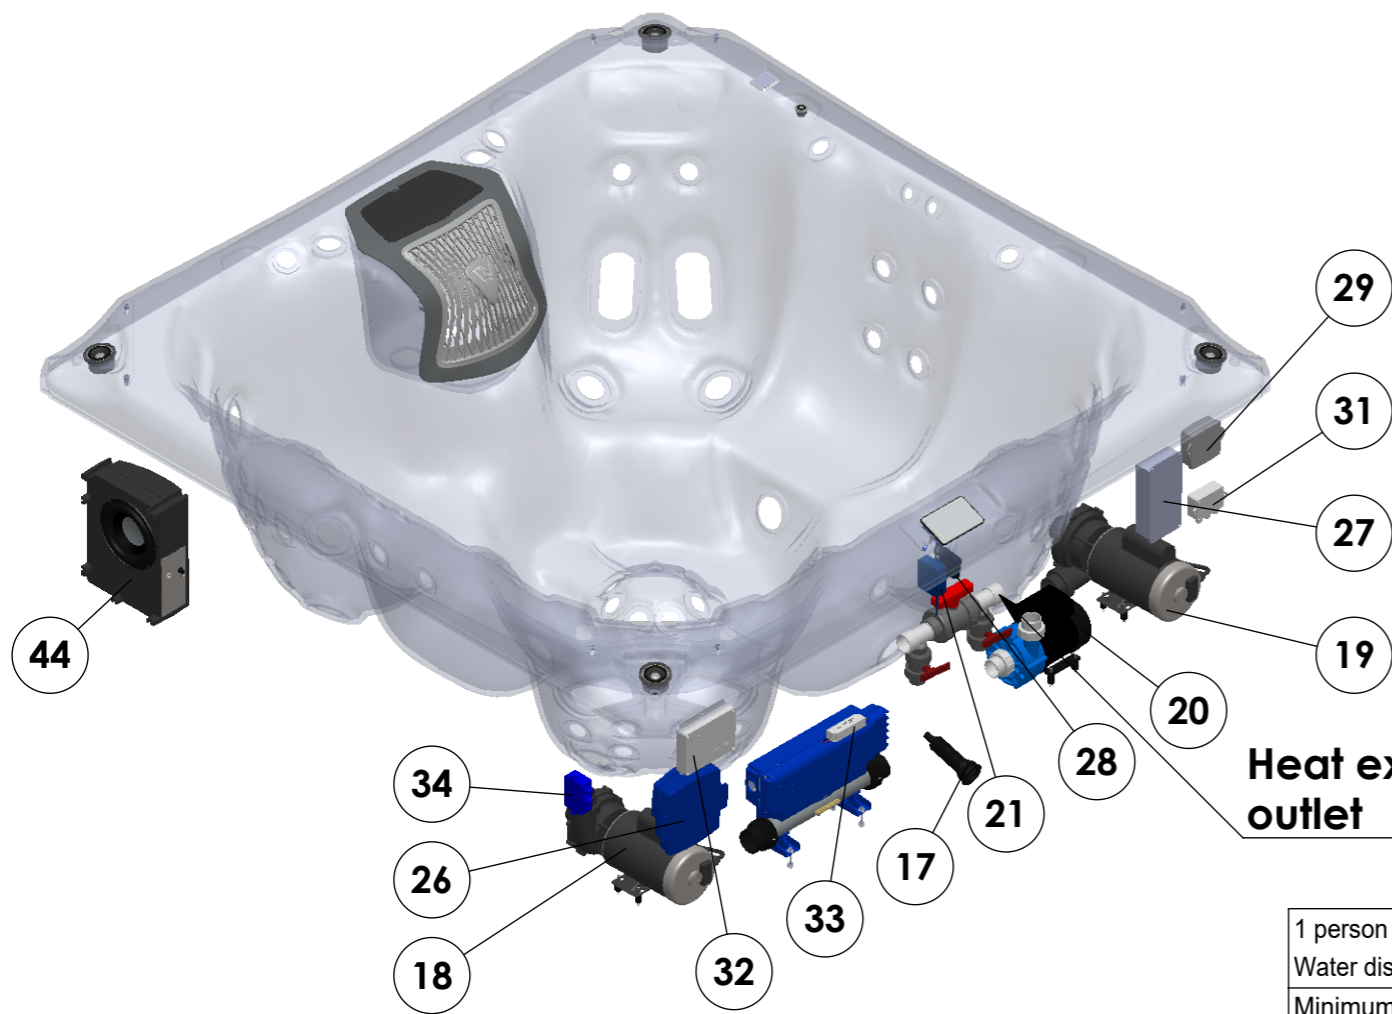


Electrical connection  
suggested side





Heat exchanger  
outlet

	No.	Part No.	Description	Pcs.
	1	AKU1893	On-Off tap house 33 transparent V2	3
	2	AKU1892	Air Regulator - house led lighted V2	5
	3	AKU2647	Led housing with seal	6
	4	AKU2219	Nut for ledhouse	6
	5	AKU2442	Water Inlet with sealig Life	2
	6	AKU2437	Cup Holder Light - lens wellis 2020	2
	7	AKU2438	Cup Holder Light nut	2
	8	AKU2680	Bushing for snap PeakLife	10
	9	AJ00277	7" jet body oscillator 2020	4
	10	AJ00278	7" jet fixation console 2020	4
	11	ABE0525	Suction 2" with sealing Life	3
	12	AJ00291	Jet ozone with sealing V2	1
	13	AJ00292	Ozone nut sel-aligning V2	1
	14	AJ00246	Washer self-aligning	1
	15	AJ00282	Jet water circulation self-levelling medium gray for life	1
	16	AKU1840	Filter holder - 48 mm	3
	17	AKU0084	Water Drain - 20 RB V2	1
	18	ACM0735	Spa Pump 3 HP - Two Speed 60 Hz	1
	19	ACM0734	Spa Pump 3 HP - One Speed 60 Hz	1
	20	ACM0902	Circulation pump WTC50M 250 W 60Hz	1
	21	ACM1092	UL ozone	1
	22	ACM1054	Control box IN.YE-3 Gecko (4Kw) 60Hz V3	1
	23	ACM0969	Keypad for electrical water diverter	1
	24	ACM0912	Control Panel - IN.K1000 V2	1
Optional	25	ACM0874	Speaker 3" (2 way)	4
Optional	26	ACM0998	IN.STREAM-2 with quick connector	1
	27	ACM1072	LED extender 12/5 V	1
	28	ACM0890	Wifi in-touch 2 Gecko USA 60 Hz	1
	29	ACM0881	In.Grid external heater controller and 4 ways connector	1
	30	ACM0763	Control Panel - AUX One Button IN.K110	1
	31	ACM1191	In mix signal extender	1
	32	ACM1128	WIS main unit	1
	33	ACM1129	WIS power adapter	1
	34	ACM0970	Control unit for electrical water diverter	1
	35	AKU2719	On-off tap grip light gray Life Wellis	2
	36	AKU2717	Air regulator grip light gray Life Wellis	6
	37	AJ00266	3" jet face 2020	46
	38	AJ00265	3" jet insert 2020	46
	39	AJ00273	5" jet face 2020	11
	40	AJ00272	5" jet insert swirling 2020	5
	41	AJ00270	5" jet insert directional 2020	6
	42	AKU2236	Skimmer with opening cover	1
	43	AF00066	Pillow 24x17 light gray	4
Optional	44	ACM0849	Subwoofer 288W (AQ-SWP8-2)	1
	45	ABE0506	Ball Valve 48	1
	46	ABE0540	Tee 48-32	2
	47	ABE0308		2

You must install a 30 mA residual-current device (RCD).

Product family: Wellis\USALine\PeakLife


Sheet name: <b>Elbrus Life USA</b>				Projection 		 Wellis Magyarország Zrt.			
File name: <b>FJ_WM00780_ENG_Elbrus Life USA medence</b>									
Dimension SPA: <b>2360x2360x950 mm</b>			Min.El. nds: <b>240 V - 30A - 60Hz / Opt.El. needs: 240V - 50A - 60Hz</b>						
Weight of the SPA: <b>452 kg</b>		<b>Raklap 2370x980 USA - AE00898</b>		<b>Control box: GECKO YE-3 + IN. K1000 V2</b>					
Rim height: <b>145 mm</b>		Approved by: <b>Ress Tamás</b>			Pr. No:		Number: <b>WM00780</b>		<b>B</b>
Created: <b>2024. 04. 16.</b>		Drawer: <b>ress.tamas - 2024. 04. 15. 15:20:21</b>			Fe. No:		<b>A3 M 1:50</b>		page 1 / 2

INSTALLATION INSTRUCTIONS

Installation, connection and electrical installation can be done only by professionals!  
The given dimensions are for information only, they may differ from reality due to the manufacturing technology of pools.

ATTENTION!

Pools can be installed only when electric schock protection compliance of the installed residual-current device is stated by the installation personnel in written form.

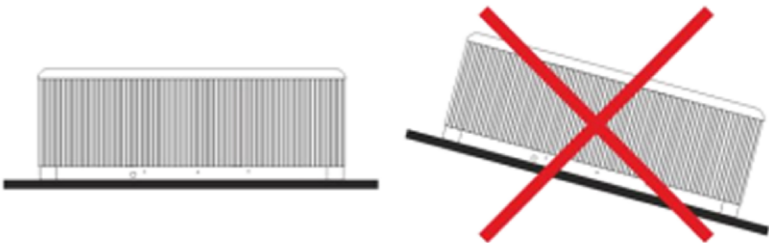

1. General installation instructions

A solid, level base (maximum 0.5% slope) is essential for setting up the pool. Make sure the cover or base is properly supporting the pool.  
For this, you need to know the maximum load capacity of the cover. Consult a qualified architectural professional or structural engineer. To determine the weight, contents and parts of the pool, refer to the data table of the pool. This weight should not exceed the calculated static capacity per square meter, otherwise it may cause serious damage to the pool and the substrate. **60 cm of space is required around the pool provided for servicing**, if this cannot be done, in the event of servicing, advance notice must be given and access to the pool must be ensured! It is advisable to create a water confluence on the outlet side of the pool. Its purpose is to drain rainwater and splashing water from around the pool, and also to allow the water to flow away in case the pool is lowered at the bottom outlet.

a. Indoors/Basement

In case of placing the pool inside a building take into consideration the following requirements: The base must have a proper drain channel to prevent water collecting around the pool.  
Incase a new place is buil for the pool, it is strongly recommended to install a floor drain to prevent damage due to water overflow or mechanical failure, etc.  
If no floor drain is installed, our Company takes no responsibility for occuring damages.  
Inside the room where the pool is installed, humidity can increase significantly. To prevent precipitating water and the occurance of fungus, proper ventillation of the room is highly recommended.  
It is also suggested to install a dehumidifier device in the room. Acryl absorbs heat from the sun rapidly, due to which the pool can suffer significant heat damage. In case the pool is installed between glass structures, please prevent the sunrays to reach the pool directly through the glass, otherwise temperatures can rise too high.

b. Outdoors/Closed terrace

If the pool is installed outdoors, it is recommended to build a horizontal, reinforced concrete base with min. 10-15 cm thickness. Do not expose the empty pool direct sunlight without proper protection (thermal cover on top). Please keep in mind that long term exposure to sunlight will damage the pool and its accessories.

c. Recessed installation

In case of recessed installation a 60 cm wide manhole must be built around the pool for proper access and servicing.  
Only the part of the pool that is under the acrylic rim can be recessed. In case these conditions are not met, installation of the pool may fail!  
It is appropriate to make the drain channel in the base on the drain side of the pool. Its purpose is to take away splash water around the pool, or drain the released water.  
It is also necessary to provide water drainage in the manhole.  
The manhole should also ventillate properly. It is recommended to install an exhaust fan or other ventillation device.  
If raising the pool from its recessed place is neccessary, the customer is responsible for all related expenses.

2. Electrical installation

You must install a circut breaker dedicated only for the pool, no other devices allowed to connect. You must also install a 30mA residual-current device (RCD).

Check your product type: WM00780 Elbrus Life USA  
Check the minimal electric needs of your product: 240V 30A 60Hz  
Check the optimal electric needs of your product: 240V 50A 60HZ  
Based on the information above, choose the appropriate cable size for your product.

For electric installation in case of cables not exceeding 10 meters in length, the appropriate cable cross section and length is given in the table on the right.

- For cable legths exceeding 10 meters please consult a professional!
- In all cases, the electrical installation of the pool has to be done by an electritian.
- In case the optimal energy needs of the pool are met: the Spa pump and heating can work simultainously.
- In case only the minimal energy needs of the pool are met: the Spa pump and heating can not work simultainously.
- Installing the cables is recommended through the bottom cover (tray) by drilling a hole and using a cable gland. Recommended direction is shown on the drawing.
- Min. cable length for installation is 3 m.
- The exact way of electrical installation is always unique, highly dependant on the location and environment of the pool.



Additional electrical installation (cable, circuit breaker and residual-current device) is the customer's responsibility.  
These parts are not included in the pool packaging, need to be purchased separately.  
Every pool has a dedicated installation drawing.  
Make sure that the pool is connected to a 30 mA residual-current device.  
Use copper wiring only.

If a fuse fails, replace it only with same type of fuse with same technical parameters.  
The device must be connected to the house's Equipotential Bonding Grid.

We inform you that the functioning of Spa pumps listed in the bill of materials on the first page may differ from reality. For example, if 'ACM0394 Spa Pump 3/0.6 HP - Two Speed' pump is listed as two speed, but in reality it only works with one speed, that might be because for the best massage experience a bigger influx of water is needed, thus the pump will work with its highest speed.

Kábel keresztmetszet/ Cable profile		
1x16A	3x2,5mm <sup>2</sup>	230 V
1x20A	3x4mm <sup>2</sup>	230 V
1x25A	3x4mm <sup>2</sup>	230 V
3x16A	5x4mm <sup>2</sup>	400 V

Product family: Wellis\USALine\PeakLife

Sheet name: INFO			Projection 		 Wellis Magyarország Zrt.	
File name: FJ_WM00780_ENG_Elbrus Life USA medence						
Dimension SPA: 2360x2360x950 mm		Min.El. nds: 240 V - 30A - 60Hz / Opt.El. needs: 240V - 50A - 60Hz				
Weight of the SPA: 452 kg		Raklap 2370x980 USA - AE00898		Control box: GECKO YE-3 + IN. K1000 V2		
Rim height: 145 mm	Approved by: Ress Tamás		Pr. No: Fe. No:		Number: WM00780	B
Created: 2024. 04. 16.	Drawer: ress.tamas - 2024. 04. 15. 15:20:21			A3	M 1:15	page 2 / 2